



ULTRAFLO® Nylon Elbow Loop Kit

Installation Instructions

Part Number 48355

Introduction

The 48355 Nylon Elbow loop Kit is used to make (2) 180 degree turn in an ULTRAFLO System. Also available is a 47952 ULTRAFLO Nylon Elbow kit. This kit contains (1) 90 degree elbow with adapters.



Installation

1. Assemble the Adapters into the Elbow Halves

The lances in the adapter should be facing out.

Elbow Half

Elbow Half

Adapter



2. Assemble the Adjustable Clamps to each end as shown.

Adjustable
Clamp Band



3. Connect the two elbows half together using the 1/4-20 X 3/4 bolt and flange nut..




4. Slide the steel connecting tube in the adapter, secure the tube using a adjustable clamp. see photo at the side.

Note: The steel tube will be used to connect the two elbows.


Adjustable clamp

Steel connector tube

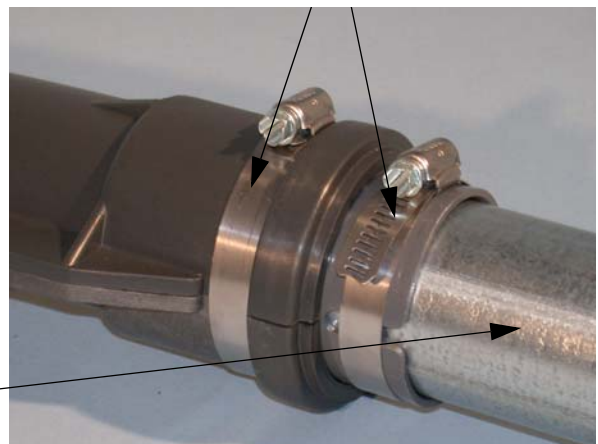

Parts Listing

ULTRAFLO Nylon Elbow Kit

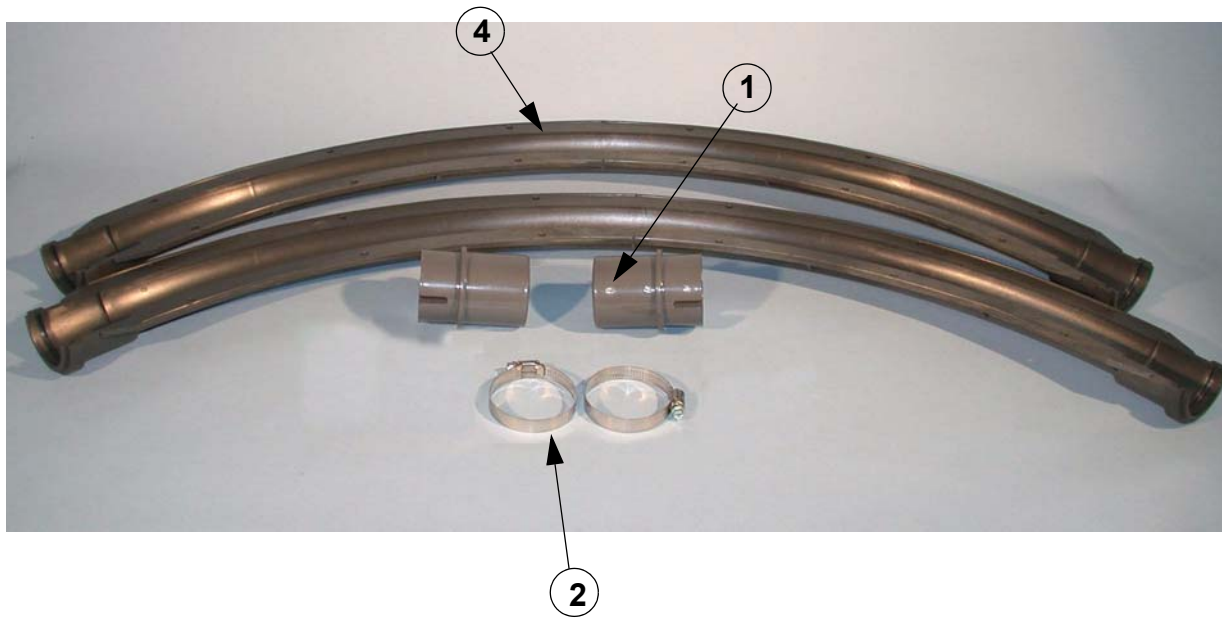

#3 hardware not shown

Item	Description	Part No.
1	Molded Elbow Adaptor	46979
2	Adjustable Clamp	8643
3	1/4-20 x .75 HX HD Bolt	1133
3	1/4-20 HX FLG Nut	46460
4	90° Molded Elbow Half	46779
	1 Foot ext. tube	48356

ULTRAFLO Loop Kit Part No. 48355

ULTRAFLO elbow kit Part No. 47952



**Made to work.
Built to last.**

Contact your nearby Chore-Time distributor or representative for additional parts and information.

**CTB Inc.
P.O. Box 2000 • Milford, Indiana 46542-2000 • U.S.A.
Phone (574) 658-4101 • Fax (877) 730-8825
E-Mail: poultry@chovertime.com • Internet: <http://www.chovertime.com>**

Printed in the U.S.A.